



Technical Data Sheet

3436-Design Your Own Test Leads

Design your own Test Leads

Specifications-

- 18GA Silicone Leads
- 1000V
- 10 AMP Rated

Made in USA

Select the connectors you need on each end and the cable length and we will make the leads for you.

(All connectors are permanently attached to the cable here at our facility).



5 easy steps to design your own Test leads.

Step 1- Select 1st Connector

Step 2- Select 2nd Connector






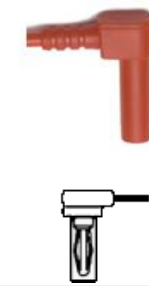


Step 3- Select Length Available in 24" (inch), 36", 48", 60", 72", 96", 120", 180", 240" and 300" lengths

Step 4- Select Color Available in Red, Black, (Yellow, Green & Blue cable available with Black Connectors only)

Step 5- Enter Your Selections in the Drop-Downs at top of page

Probe Master Inc. 215 Denny Way, El Cajon, CA. 92020 USA

www.probemaster.com

Meter connections		
A		4mm Banana Plug
B		4mm Safety Banana Plug
D		4mm Safety Female Jack
E		4mm Right Angle Banana Plug
F		4mm Rt Angle Safety Female Jack
G		4mm Rt Angle Safety Banana Plug
H		4mm Retractable Safety Banana Plug
I		0.080" Pin Plug Connector